

## AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

AL-804 (FAA)

BALTIMORE, MARYLAND

D-ATIS  
115.1 127.8  
BALTIMORE TOWER  
119.4 257.8  
GND CON  
121.9  
CLNC DEL  
118.05  
CPDLC

D

324  $\Delta$ 

- 39°12'N

RWY 10-28  
PCN 105 F/A/W/T  
S-80, D-220, 2D-1020, 2D/2D2-1340

RWY 15L-33R  
PCN 15 F/A/W/T  
S-30, D-45

RWY 15R-33L  
PCN 70 F/A/W/T  
S-80, D-220, 2D-675, 2D/2D2-890

JANUARY 2020  
ANNUAL RATE OF CHANGE  
0.0° E

AIR  
CARGO

GENERAL  
AVIATION  
PARKING

DE-ICE

ELEV  
139  
DE-ICING

### ALTERNATE DE-ICING

U.S. CUSTOMS

4

FIELD  
ELEV  
143

ELEV'

## MID-FIELD CARGO COMPLEX

FIRE  
STATION

APRON

53RLLV  
114  
OLD

ELEV  
126

ASDE-X in use. Operate transponders with altitude reporting mode and ADS-B (if equipped) enabled on all airport surfaces.

Runway Status Lights in operation.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°41'W

76°40'W

- 39°10'N -

NE-3, 03 DEC 2020 to 31 DEC 2020

## AIRPORT DIAGRAM

20310

BALTIMORE, MARYLAND

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)