

VORTAC FWA	APP CRS	Rwy Idg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5  
FORT WAYNE INTL (FWA)

DME or RADAR required.



For inop ALS, increase S-5 Cat C/D/E visibility to 1½ SM.  
ASR

ALS-F2

MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

Procedure NA for arrival on FWA VORTAC  
airway radials 198 CW 294.

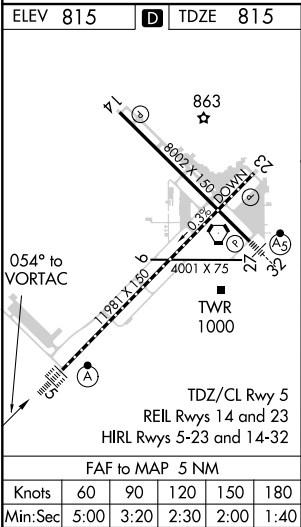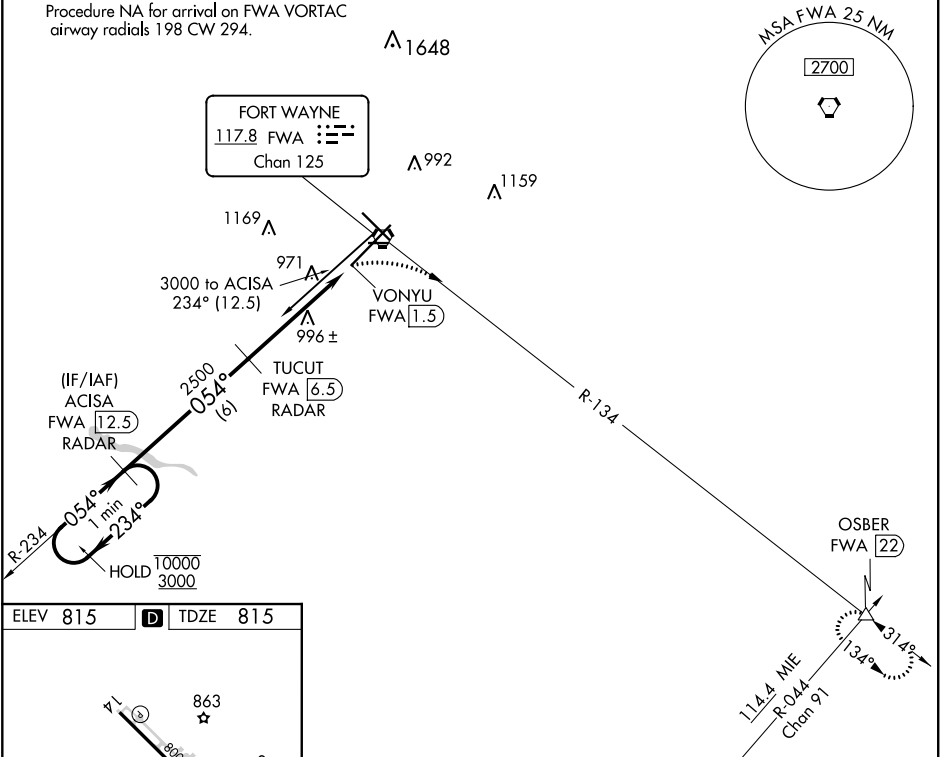

One Minute Holding Pattern		ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 FWA R-134	OSBER
10000 3000		234° 054°	054°	2500	3.07° TCH 55
		6 NM	3.6 NM	1.4	
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1¼)
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 03 DEC 2020 to 31 DEC 2020

EC-2, 03 DEC 2020 to 31 DEC 2020