

LOC	I-DNV	APP CRS	Rwy Idg	6006
	<b>108.5</b>	<b>209°</b>	TDZE	697
			Apt Elev	697

ILS or LOC RWY 21

VERMILION RGNL (DNV)



⚠

If local altimeter not received, use University of Illinois-Willard altimeter setting, and increase all DAs/MDAs 100 feet.

MALS

MISSED APPROACH: Climb to 1400, then climbing right turn to 2600 via DNV R-243 to BUBLE INT and hold.

AWOS-3	CHAMPAIGN APP CON ★	CLNC DEL	UNICOM
<b>119.275</b>	<b>121.35 285.65</b>	<b>121.7</b>	<b>122.7 (CTAF) 0</b>

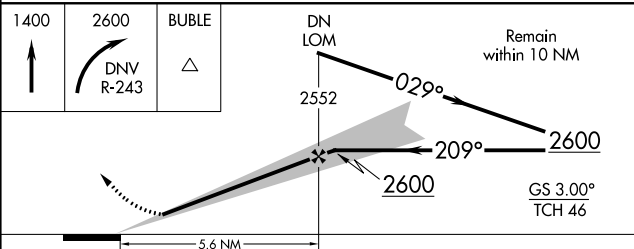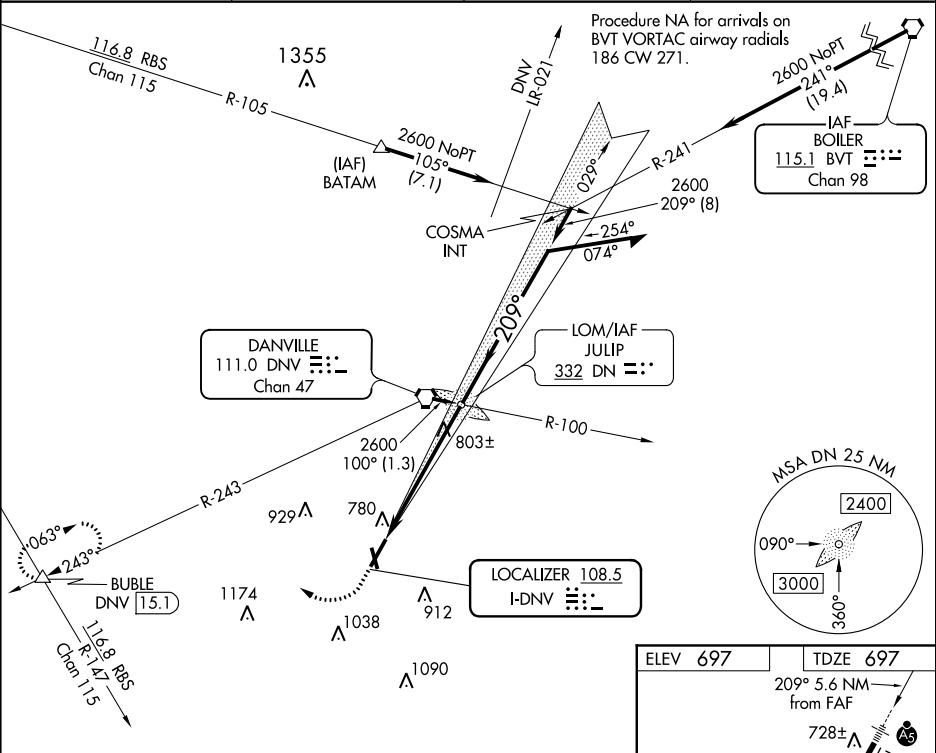

CATEGORY	A	B	C	D
S-ILS 21	897-½ 200 (200-½)			
S-LOC 21	1080-½ 383 (400-½)		1080-¾ 383 (400-¾)	
CIRCLING	1160-1 463 (500-1)		1160-1½ 1260-2 463 (500-1½) 563 (600-2)	

ELEV 697

TDZE 697

209° 5.6 NM from FAF

728±

717±

718

3999 X 100

0.88

0.68

34

HIRL Rwy 3-21

MIRL Rwy 16-34

REIL Rws 16 and 34

FAF to MAP 5.6 NM

Knots	60	90	120	150	180
Min:Sec	5:36	3:44	2:48	2:14	1:52