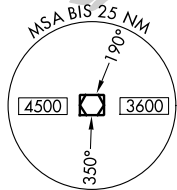


ILS or LOC RWY 13
BISMARCK MUNI (BTS)

MISSED APPROACH: Climb to 2200 then climbing left turn to 3600 direct BIS VOR/DME and hold, continue climb-in-hold to 3600.

UN|COM

REIL Rwy 3 and 21
HIRE Rwy 3-21 and 13-31

Diagram illustrating the JABVU VOR/DME station and associated navigation aids. The diagram shows a VOR/DME station at 2200 feet, a DME station at 3600 feet, and a BILS station at 2300 feet. Distances are given in NM: 7.6 NM from the VOR/DME station to the DME station, 3.5 NM from the DME station to the BILS station, and 2.1 NM from the BILS station to the JABVU station. The diagram also shows a 131-degree bearing from the VOR/DME station to the DME station, a 3600-foot distance from the DME station to the BILS station, and a 2380-foot distance from the BILS station to the JABVU station. The diagram is labeled 'JABVU VOR/DME' and 'JABVU BILS'.