

APP CRS  
**130°**

Rwy Idg **3500**  
TDZE **1020**  
Apt Elev **1021**

⚠

⚠

Circling NA at night. DME/DME RNP-0.3 NA. When local altimeter setting not received, use Benson altimeter setting and increase all MDA 40 feet. VDP NA with Benson altimeter setting.


MISSED APPROACH: Climb to 2900 direct BOMGE and hold.

CTAF  
**122.9**

AWOS-3  
**118.5**

MINNEAPOLIS CENTER  
**127.1 290.2**

CTAF  
**122.9**

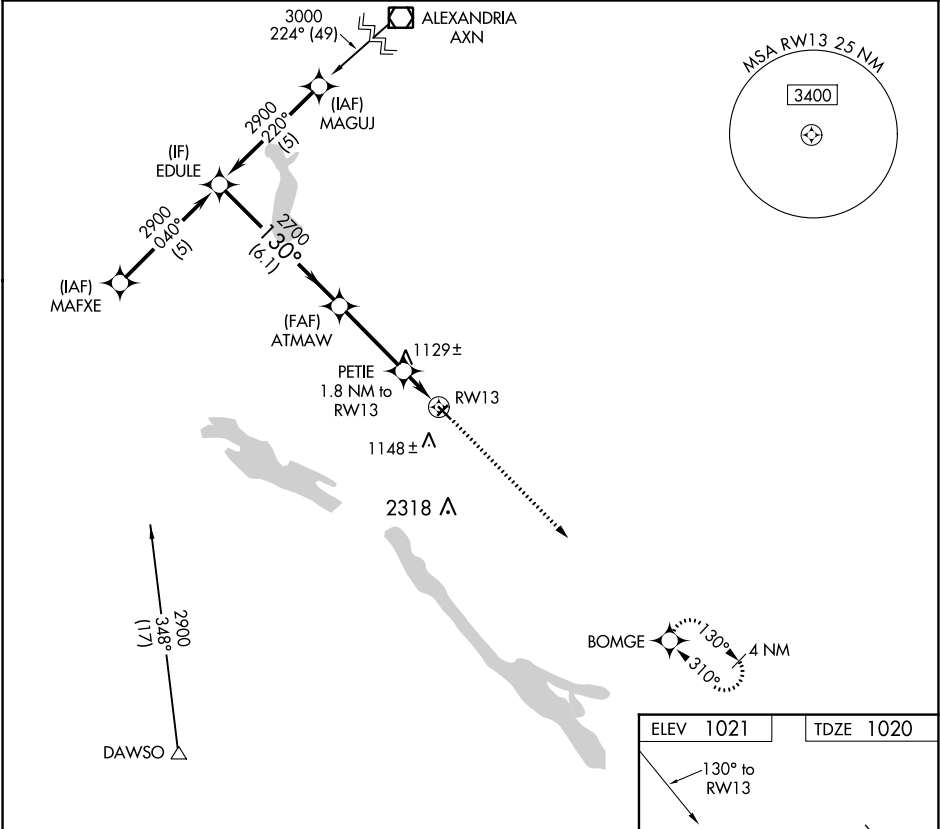

EDULE

2900

130°

Procedure Turn NA

ATMAW

2700

3.04°

TCH 45

PETIE

1.8 NM to RW13

1.3 NM to RW13

1620

2900

BOMGE

6.1 NM

3.3 NM

0.5

1.3 NM

CATEGORY	A	B	C	D
LNAV MDA	1480-1	460 (500-1)	1480-1¼ 460 (500-1¼)	NA
CIRCLING	1480-1	459 (500-1)	1480-1½ 459 (500-1½)	NA

ELEV 1021

TDZE 1020

MIRL Rwy 13-31