
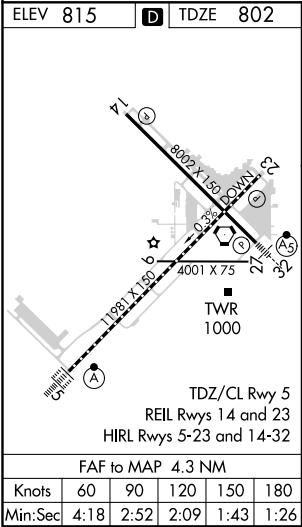


VORTAC FWA	APP CRS	Rwy Idg	8001
117.8	145°	TDZE	802
Chan 125		Apt Elev	815

VOR or TACAN RWY 14
FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825		FORT WAYNE APP CON 127.2 284.6		FORT WAYNE TOWER 119.1 269.325
				GND CON 121.9 348.6
				CLNC DEL 124.75

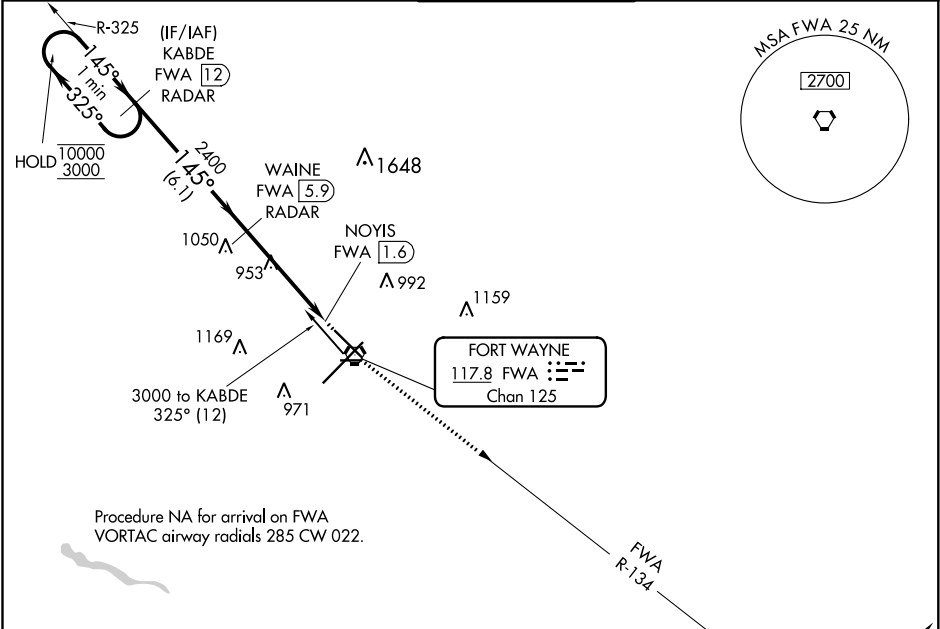

One Minute Holding Pattern		KABDE FWA 12 RADAR		WAINES FWA 5.9 RADAR		3000 FWA R-134		OSBER	
10000 ← 325°		145° →		145°		2400		3.05° TCH 53	
		6.1 NM		3.4 NM		0.9		0.5	
CATEGORY	A	B	C	D	E				
S-14	1280-1	478 (500-1)	1280-1 3/8 478 (500-1 3/8)	1280-1 1/2 478 (500-1 1/2)	1280-1 3/4 478 (500-1 3/4)				
CIRCLING	1300-1	485 (500-1)	1360-1 1/2 545 (600-1 1/2)	1520-2 1/4 705 (800-2 1/4)	1520-2 1/2 705 (800-2 1/2)				