
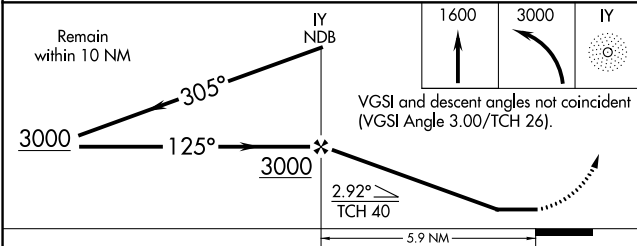


LOC I-YYY 108.3	APP CRS 125°	Rwy Idg TDZE Apt Elev 4000 1121 1125
---------------------------	------------------------	--

LOC RWY 12
NORTHEAST IOWA RGNL (CCY)

ADF required for procedure entry.	MISSED APPROACH: Climb to 1600 then climbing left turn to 3000 direct IY NDB and hold.
<div><div></div><div></div></div> <div>Circling NA to Rwys 4-22 and 18-36. When local altimeter setting not received, use Waterloo altimeter setting and increase all MDA 120 feet, increase S-12 visibility Cat C 3/8 SM and Circling Cat C 1/2 SM.</div>	

AWOS-3 125.525	WATERLOO APP CON ★ 118.9 251.15	UNICOM 122.8 (CTAF) 1
--------------------------	---	---------------------------------

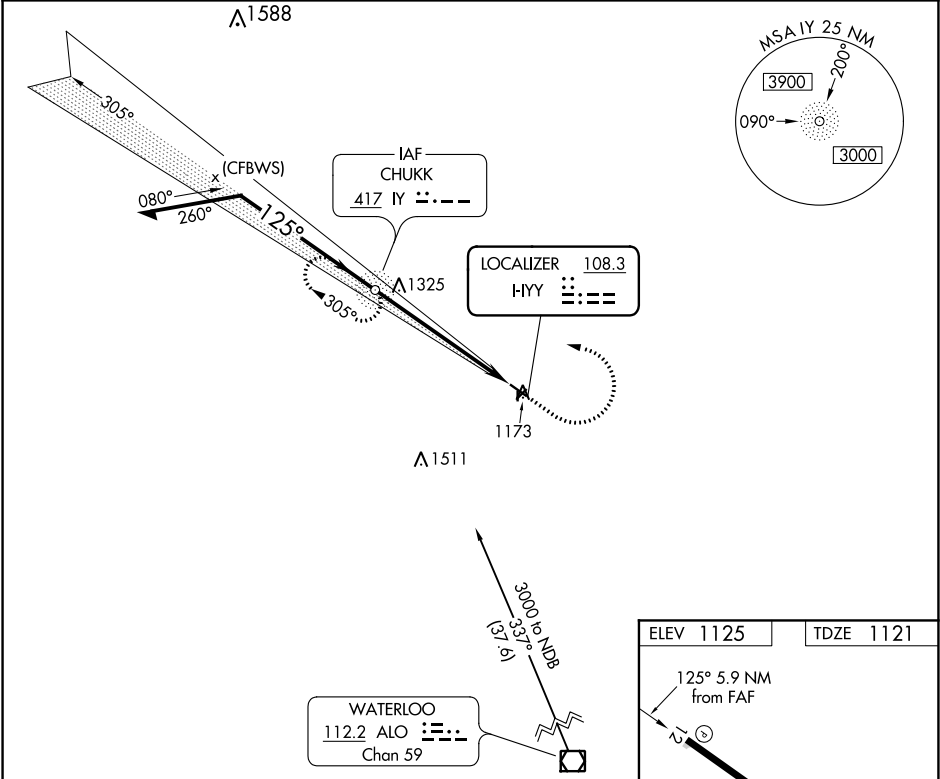

CATEGORY	A	B	C	D
S-12	1560-1	439 (500-1)	1560-1¼ 439 (500-1¼)	NA
CIRCLING	1560-1 435 (500-1)	1580-1 455 (500-1)	1760-1¾ 635 (700-1¾)	NA

