


LOC/DME	I-RUT	APP CRS	Rwy Idg
111.7	194°	TDZE	5003
Chan 54		Apt Elev	787

ILS Y or LOC Y RWY 19

RUTLAND-SOUTHERN VERMONT RGNL (RUT)

DME required.		MALSRR	MISSED APPROACH: Climb to 2840 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE INT/I-RUT 16.3 DME and hold.
Circling to Rwy 13, 31 NA at night. Circling NA northeast of Rws 19 and 31. Inop table does not apply to S-ILS 19 all Cats, S-LOC 19 Cats C/D.		AS	
-4°C			
AWOS-3PT	BOSTON CENTER	UNICOM	
118.375	135.7 282.2	122.8 (CTAF) 0	

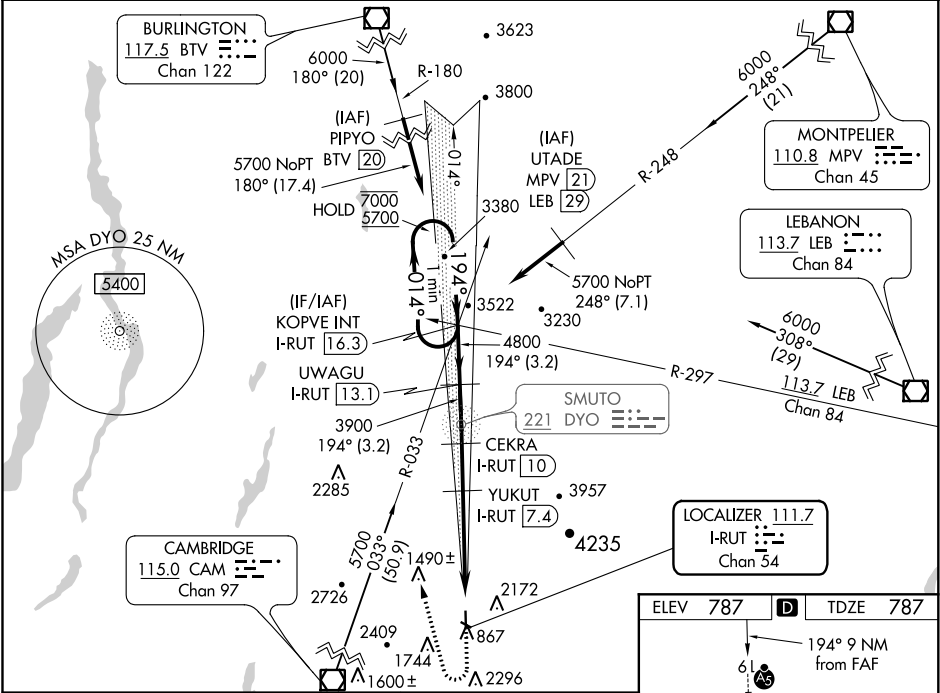

KOPVE INT I-RUT 16.3		CEKRA I-RUT 10		YUKUT I-RUT 7.4		*LOC only	
One Minute Holding Pattern		UWAGU I-RUT 13.1		*I-RUT 3.9		I-RUT 0.9	
7000 ← 014°		5700 → 194°		4800		3900	
GS 3.20°		TCH 54		3900		*3040	
3.2 NM		3.2 NM		2.5 NM		3.5 NM	
CATEGORY		A		B		C	
S-ILS 19		2162-5		1375 (1400-5)			
S-LOC 19		2160-3/4		2160-1		2160-3	
		1373 (1400-3/4)		1373 (1400-1)		1373 (1400-3)	
CIRCLING		2160-1 1/4		2160-1 1/2		2520-3	
		1373 (1400-1 1/4)		1373 (1400-1 1/2)		1733 (1800-3)	
						2760-3	
						1973 (2000-3)	

