

TAKEOFF MINIMUMS
Rwys 3, 18, 21, 36: Standard with minimum climb of 500' per NM to 1700.

TAKEOFF RWY 3: Climb heading 032° to 1700, then left turn heading 356° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 18: Climb heading 176° to 1700, then heading 176° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 21: Climb heading 212° to 1700, then left turn heading 176° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 36: Climb heading 356° to 1700, then heading 356° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

. . . . on track 080° to FUNNLL, then on (transition). Maintain 3000 or as assigned by ATC. Expect filed altitude 10 minutes after departure.

PHARA TRANSITION (FUNNLL3:PHARA)

FUNNLL THREE DEPARTURE (RNAV)



(FUNNLL3.FUNNLL) 17341

UNIVERSITY OF OKLAHOMA WESTHEIMER (OUN)
NORMAN, OKLAHOMA
AL-5672 (FAA)

TOP ALTITUDE:
Assigned by ATC

AWOS-3
119.55
GND CON
121.6
WESTHEIMER TOWER ★
118.0
OKE CITY DEP CON
120.45 288.325

NOTE: RADAR required.
NOTE: DME/DME/IRU or GPS required.
NOTE: RNAV 1.

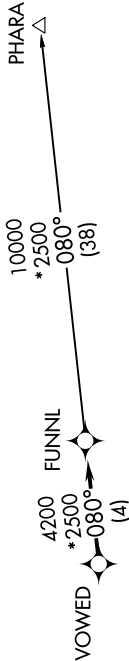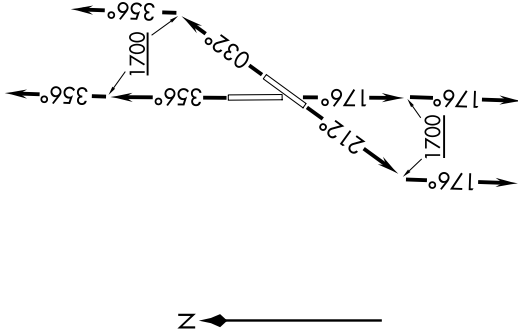

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 3: Climb heading 032° to 1700, then left turn heading 356° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 18: Climb heading 176° to 1700, then heading 176° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 21: Climb heading 212° to 1700, then left turn heading 176° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

TAKEOFF RWY 36: Climb heading 356° to 1700, then heading 356° or as assigned by ATC, expect RADAR vectors to VOWED. Thence

. . . . on track 080° to FUNNLL, then on (transition). Maintain 3000 or as assigned by ATC. Expect filed altitude 10 minutes after departure.

PHARA TRANSITION (FUNNLL3:PHARA)

NOTE: Chart not to scale.

FUNNLL THREE DEPARTURE (RNAV)

(FUNNLL3.FUNNLL) 07DEC17

NORMAN, OKLAHOMA
UNIVERSITY OF OKLAHOMA WESTHEIMER (OUN)