

NDB IOB	APP CRS	Rwy Idg	5000
210	020°	TDZE	1019
		Apt Elev	1019

MOUNT STERLING-MONTGOMERY COUNTY (IOB)

NDB RWY 3


▼

▲ NA

When local altimeter setting not received, use Lexington altimeter setting and increase all MDA 80 feet and increase all visibilities ½ mile.  
Helicopter visibility reduction below ¾ SM NA.

MISSED APPROACH: Climbing right turn to 3000 in IOB NDB holding pattern.

AWOS-3 120.675	LEXINGTON APP CON 120.15 259.3	GCO 121.72	UNICOM 122.8 (CTAF) 0
-------------------	-----------------------------------	---------------	--------------------------

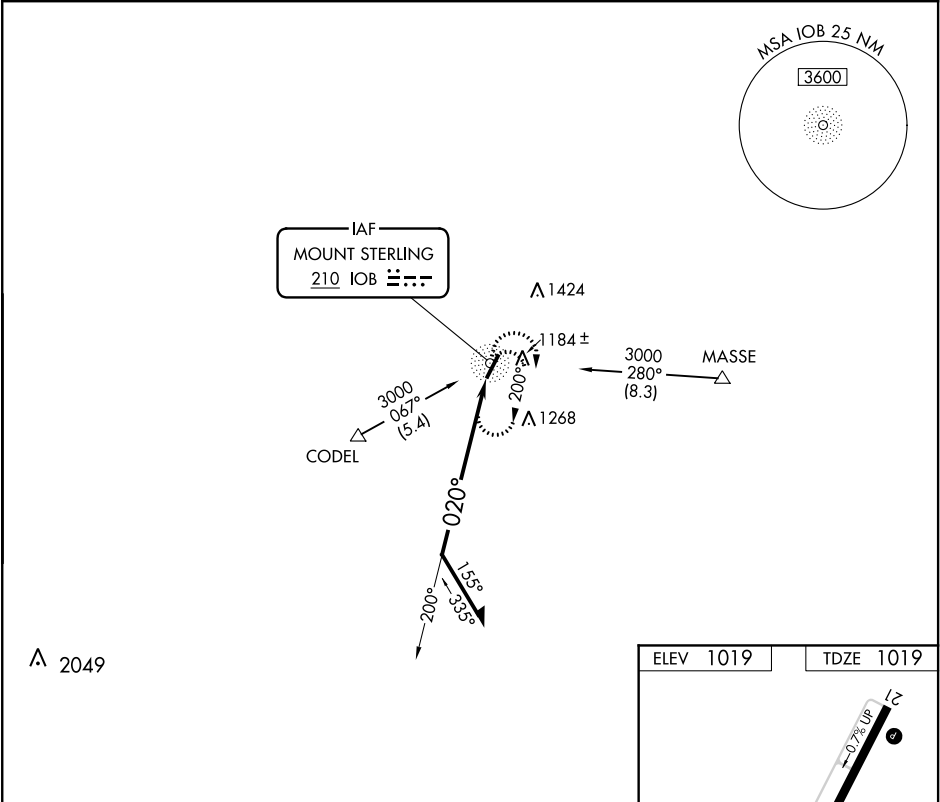

Remain within 10 NM

IOB NDB

3000

200°

020°

3000

IOB

CATEGORY	A	B	C	D
S-3	1720-1	701 (800-1)	1720-2	701 (800-2)
CIRCLING	1720-1	701 (800-1)	1740-2 721 (800-2)	1740-2¼ 721 (800-2¼)

ELEV 1019

TDZE 1019

020° to IOB NDB

MIRL Rwy 3-21 0

REIL Rws 3 and 21 0