

VOR/DME FLM	APP CRS	Rwy Idg	N/A
117.0	107°	TDZE	N/A
Chan 117		Apt Elev	913

VOR/DME-A

FLEMING-MASON (FGX)


▼

NA

When local altimeter setting not received, use Lexington altimeter setting and increase all MDA 140 feet.

MISSED APPROACH: Climbing right turn to 2500 via heading 340° and FLM VOR/DME R-107 to PHLOX/FLM 22 DME and hold.

AWOS-3 118.125	INDIANAPOLIS CENTER 124.225 360.725	UNICOM 123.0 (CTAF) 0
-------------------	--	--------------------------

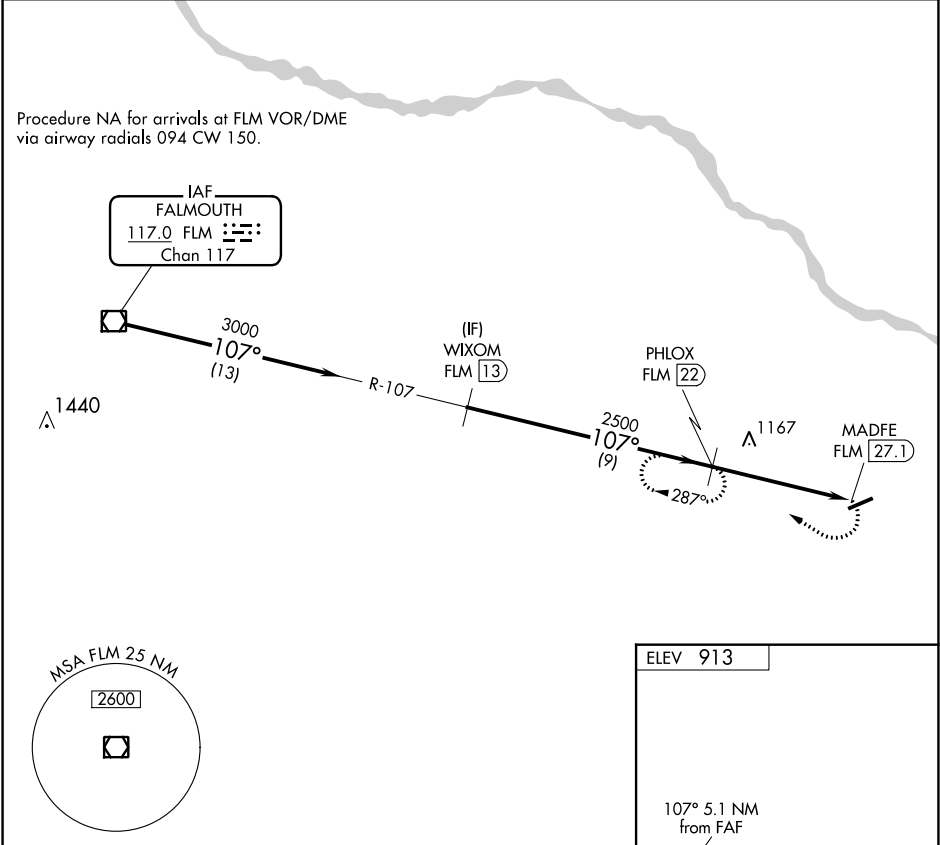

FLM VOR/DME		WIXOM FLM 13		PHLOX FLM 22		MADFE FLM 27.1	
3000		3000		2500 *		2500	
107°						hdg 340° FLM R-107	
Procedure Turn NA							
13 NM		9 NM		5.1 NM			
CATEGORY	A	B	C	D			
CIRCLING	1900-1¼ 987 (1000-1¼)	1900-1½ 987 (1000-1½)	1900-3	987 (1000-3)			

ELEV 913

107° 5.1 NM from FAF

5002 X 100

985

MIRL Rwy 7-25 0

REIL Rwys 7 and 25 0