



ILS PRM RWY 10 (CAT II & III)
(SIMULTANEOUS CLOSE PARALLEL)
HARTSFIELD-JACKSON ATLANTA INTL (ATL)

MISSED APPROACH: Climb to 1400 then climbing right turn to 3000 on ATL VORTAC R-185 to SCARR INT/ATL 15 DME and hold.


CLNC
DEL
118.1

CPDLC

Λ
2049

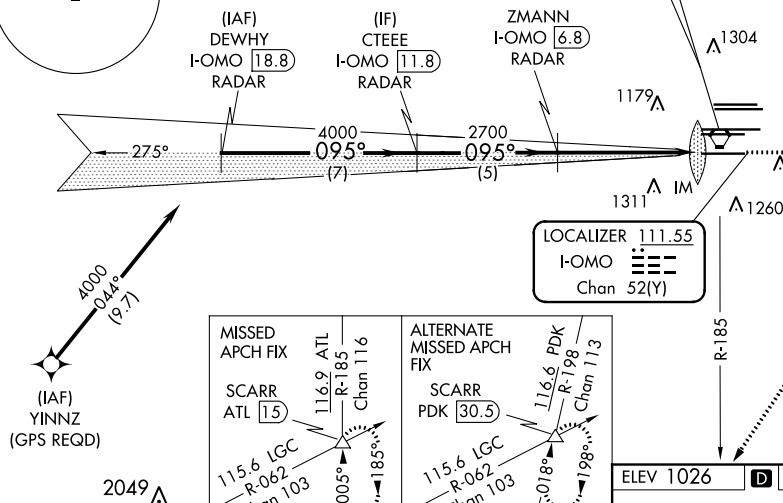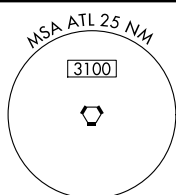


ELEV 1026	D	TDZE 1000
-----------	----------	-----------

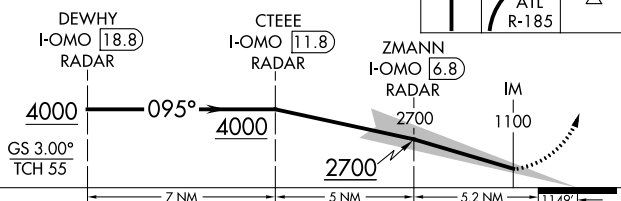

CATEGORY	A	B	C	D
S-ILS 10	CAT II	RA 110/12	100	DA 1100
S-ILS 10		CAT IIIa	RVR 07	
S-ILS 10		CAT IIIb	NA	
S-ILS 10		CAT IIIc	NA	

CATEGORY II & III ILS - SPECIAL AIRCREW
& AIRCRAFT CERTIFICATION REQUIRED

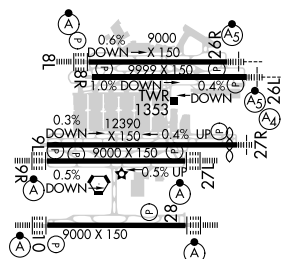

HIRL all Rwys
TDZ/CL Rwys 8L, 9R, 10, 26R,
27L and 28

ILS PRM RWY 10 (CAT II & III) (SIMULTANEOUS CLOSE PARALLEL)