


VORTAC RBL	APP CRS	Rwy Idg	5431
115.7	149°	TDZE	352
Chan 104		Apt Elev	352

VOR/DME RWY 15
RED BLUFF MUNI (RBL)

⚠ When local altimeter setting not received, use Redding altimeter setting and increase all MDAs and all Cat C/D visibility ¼ SM. VDP NA with Redding altimeter setting.

MISSED APPROACH: Climb to 2000 direct RBL VORTAC and hold.

ASOS 120.775	OAKLAND CENTER 132.2 350.3	UNICOM 123.0 (CTAF) 0
-----------------	-------------------------------	---------------------------------

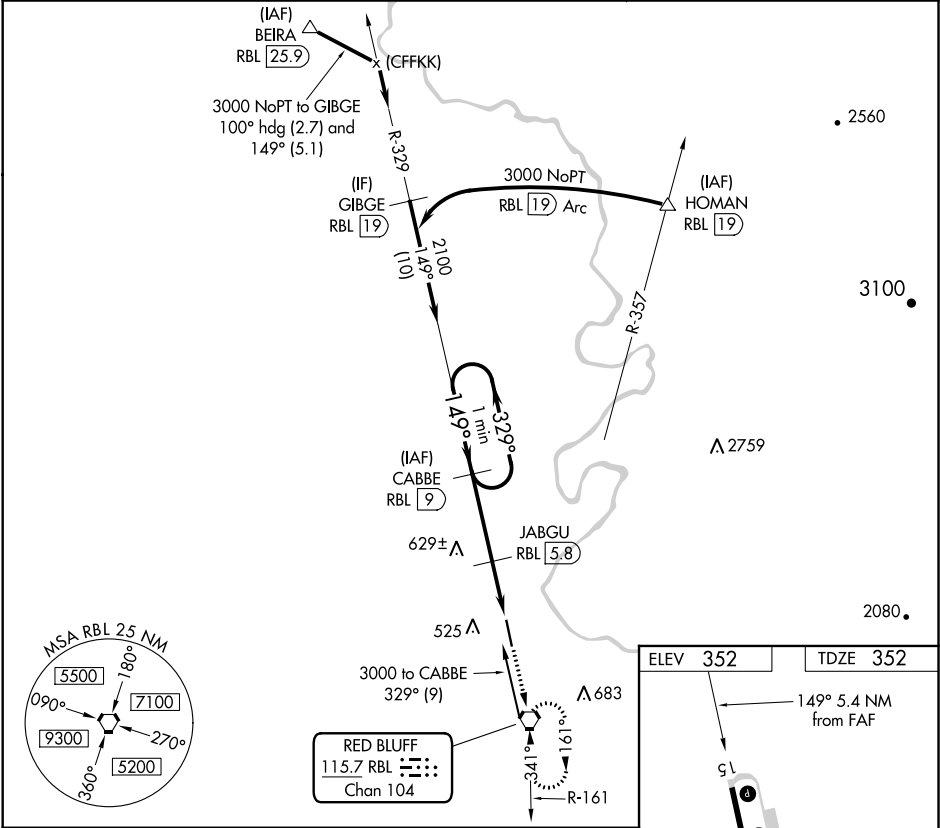

One Minute Holding Pattern	CABBE RBL [9]			
	2100	329°	149°	1080
		2.99°	TCH 40	
		3.2 NM	0.6 NM	1.6 NM
CATEGORY	A	B	C	D
S-15	880-1	528 (600-1)	880-1½	528 (600-1½)
CIRCLING	880-1	528 (600-1)	900-1½ 548 (600-1½)	1060-2¼ 708 (800-2¼)

ELEV 352

TDZE 352

149° 5.4 NM from FAF

5431 x 100

33

MIRL Rwy 15-33 **0**

REIL Rwys 15 and 33