KERMIT THREE DEPARTURE

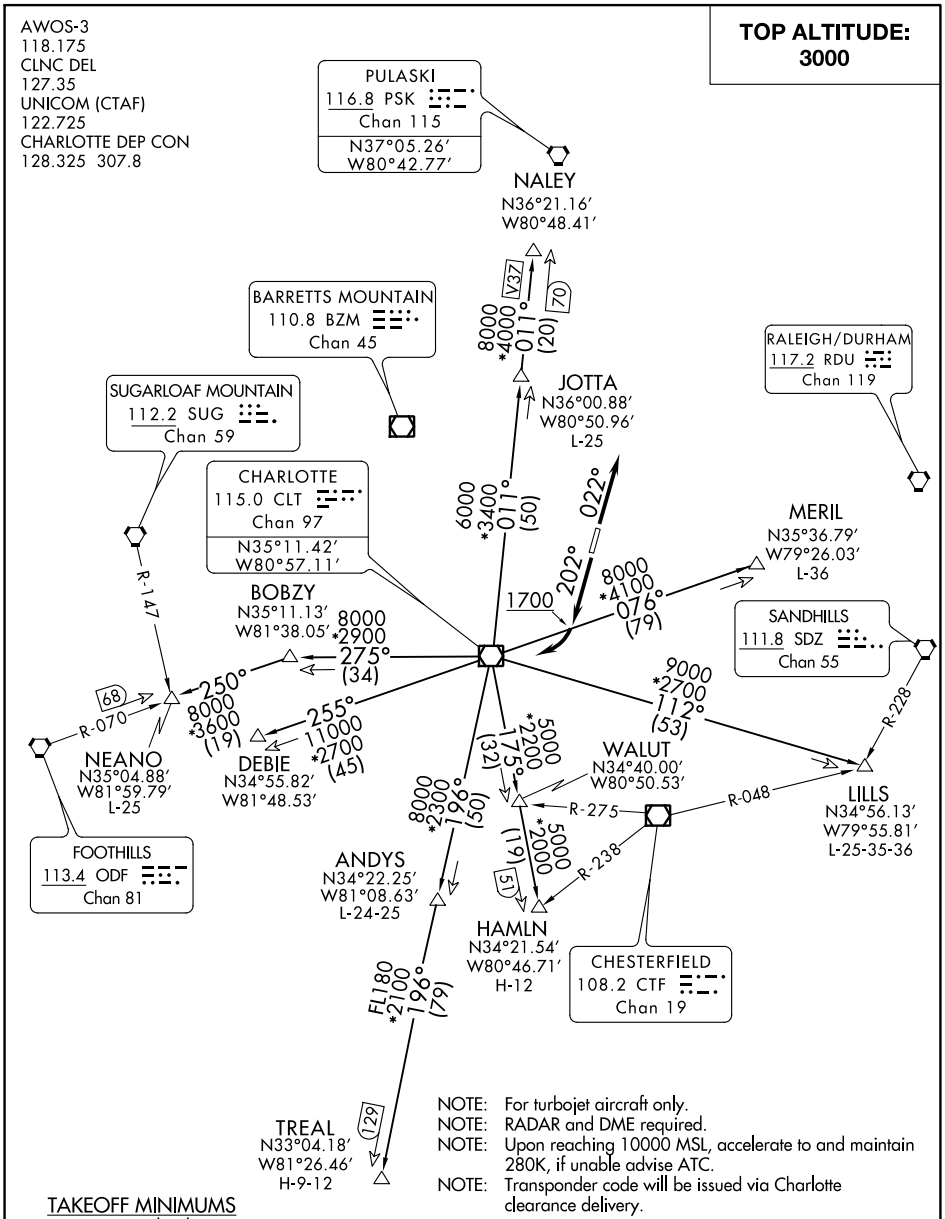

NOTE: For turbojet aircraft only.
NOTE: RADAR and DME required.
NOTE: Upon reaching 10000 MSL, accelerate to and maintain 280K, if unable advise ATC.
NOTE: Transponder code will be issued via Charlotte clearance delivery.

TAKEOFF MINIMUMS

Rwy 2: Standard.
Rwy 20: 400-2¾ or standard with minimum climb of 205′ per NM to 1300, or alternatively, with standard takeoff minimums and a normal 200′ per NM climb gradient, takeoff must occur no later than 1200′ prior to DER.

(NARRATIVE ON FOLLOWING PAGE)

NOTE: Chart not to scale.